

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION
PLEASE RETAIN INSTRUCTIONS FOR FUTURE REFERENCE



PhotonStar™ Ecostar 600 TD/600 ND Installation Instructions




IMPORTANT PLEASE READ BEFORE INSTALLATION

- Before commencing installation ensure the electricity is fully isolated.
- Installation should be carried out in accordance with the latest edition of the I.E.E. Wiring regulations (BS7671) taking into account the latest building regulations.
- Installation should be carried out by a qualified electrician.
- Live and Neutral can be connected to driver in either polarity.


WARNINGS

- Use only with the driver supplied
- This luminaire is for indoor use only
- **IMPORTANT** The driver must not be covered by ceiling insulation material; this will reduce the units operational lifetime, invalidate the guarantee and may cause a risk of fire. The driver can be installed up to 20m from the fitting. Free airspace diagram to be observed

This install manual covers the following products:

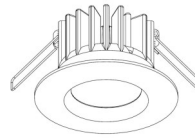

Eco600 TD

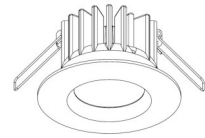

Eco600 ND








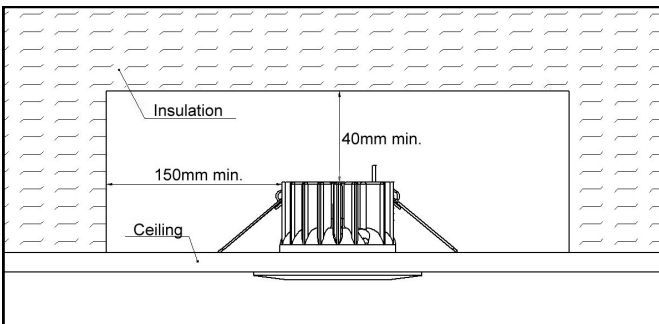


Diagram showing required airspace

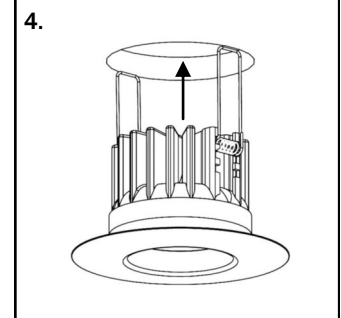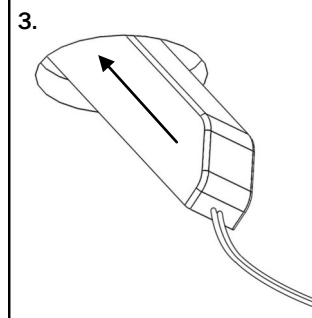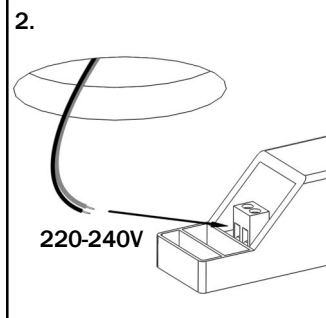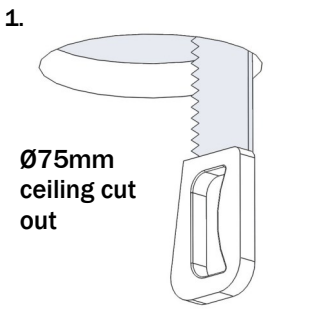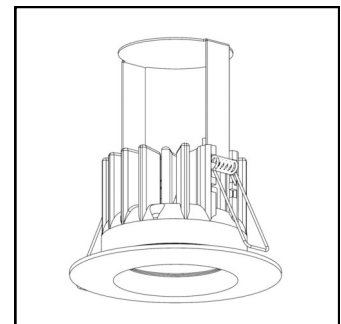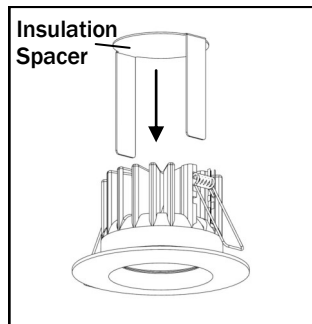

Fitting for Optional Insulation Spacer

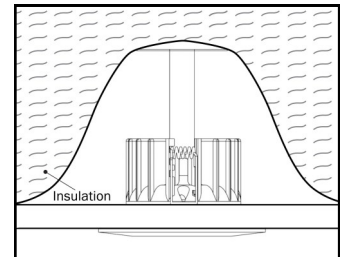

Photonstar LED Group plc
Unit 8, Westlink,
Belbins Business Park
Romsey
Hampshire
SO51 7JF

Tel: 0845 519 7717
Email: ecostar@photonstarled.co.uk
Web: www.ecostar.photonstarlighting.co.uk

Ecostar 600: 60mins 28mm 75mm CE IP65 70° L1A NO UV NO IR

Ecostar 600+: 60mins 28mm 75mm CE IP65 70° L2A NO UV NO IR

P1 of 1
Revision: 2 13/05/13